


The following steps describe how to assemble the first corner, which serves as the basis for further construction.

Step 1: Preparing the first panel

- Take a honeycomb cardboard panel and **press the L-profile** firmly into a horizontal position.
- For the next panel, **spread the L-profile** slightly **at the bottom**. This will help when inserting the second panel.

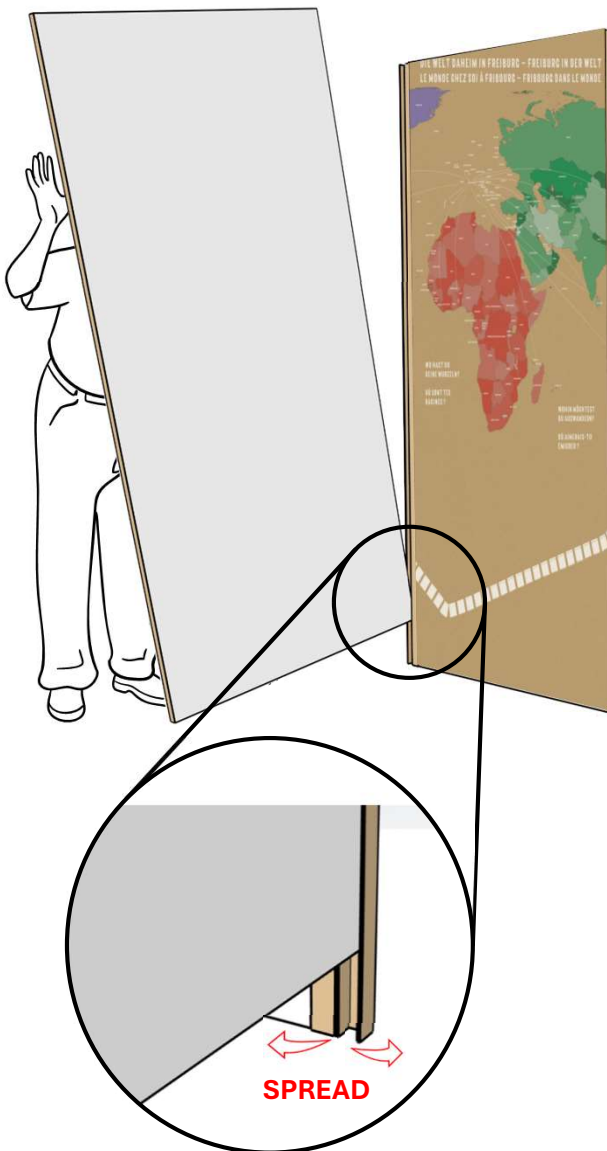

Step 2: Assembling the corner

- **Set the first panel upright** using the L-profile and take the second panel in your hand at the same time.
- **Insert the second panel** into the L-profile from below in a vertical position.
- Press the corner piece firmly from all sides.
- Your corner is now in place and forms the basis for further secure assembly.

Step 3: Continuing the assembly

- Take another profile and press it firmly against one of the corner section panels.
- Always follow the same assembly procedure: before inserting, spread the assembly profile at the bottom. This makes further assembly much easier.
- Build your wall according to your plan.

Installation note

- **CAUTION:** Provide a prop every 4 to 5 metres or install a blockout to ensure that the wall remains stable and does not wobble.
- A prop is a narrow honeycomb cardboard panel ECOPANEL 26-38.
- The U-profile can be used as edge protection for end panels.